


BEARING GREASING INSTRUCTIONS (APPLICATION: SM1500 AND LARGER CRANES)

1. TOOLS

- Grease (Waterproof High Pressure)
- Flat Head Screw Driver

2. GREASE NIPPLE

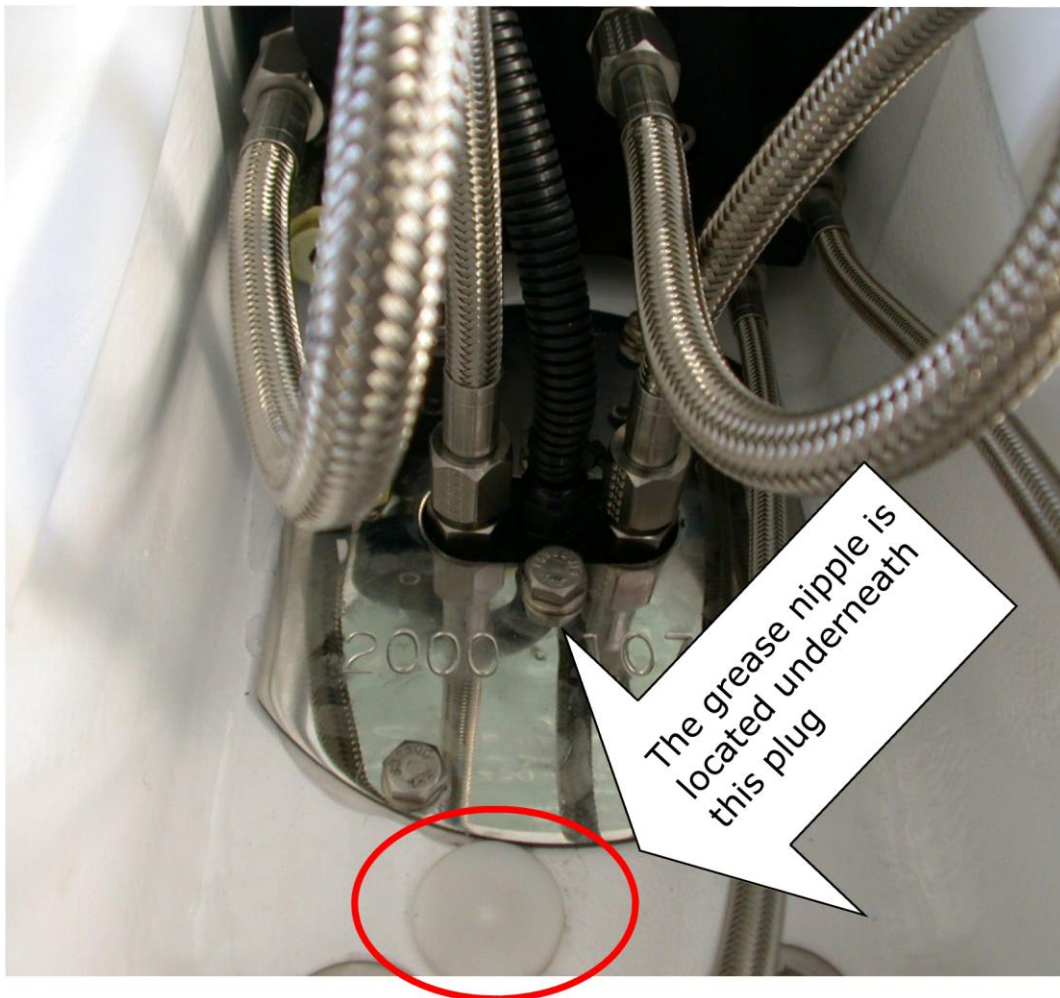

3. INSTRUCTIONS

The main bearing of your yacht crane (SM1500 or larger) needs to be greased thoroughly **every 3 months** to prevent corrosion.

- a. Raise the boom of your crane until you can access the inside of the truck.



- b. Look for the serial number plate, you will find a 3/4" diameter plastic plug directly in front of the serial number plate.
- c. Carefully pry out this plug either with your fingers or a flat head screw driver. Underneath you will see a grease nipple.
- d. Using **waterproof high pressure grease**, insert about five (5) shots into the bearing.
- e. Rotate the crane 90 degrees and insert another five (5) shots. Rotate the crane 90 degrees two more times so that you have greased the bearing at four (4) spaced points.
- f. Replace the plastic plug.
- g. Exercise the crane thoroughly in the rotation function to evenly distribute the grease.
- h. Repeat again in 3 months.

4. MAINTENANCE AND SCHEDULE

Check online for additional maintenance and repair information for a wide array of marine parts at www.theamtstore.com and www.steelheadmarine.net.

Date (mm/dd/yy)	Four Point Greasing				Comments
	1	2	3	4	

5. PARTS LIST

Description	Part Number	Notes / Checked
Waterproof High Pressure Grease	tbd	
Replacement Plug	tbd	
Grease Nipple	tbd	