

TRIOVING LOCK REMOVAL INSTRUCTIONS (REPLACING SPRINGS)


1. TOOLS

- Flat Head Screw Driver
- Alan Keys
- Torx Screw Driver

2. ESCUTCHEON PLATES

Start by removing either the Escutcheon Plate screws (if your lock is fit with an escutcheon plate) or the Rosettes screws (if your lock is fit with a rosette).

In either case, four screws will need to be removed. These screws run through the door and are fixed to blind nuts on the opposite side of the door. When the locks are assembled during production, locktite is used to prevent the screws from backing off. If you are unable to back off the screws then they may have to be drilled out and replaced with new screws when the lock is re-assembled.

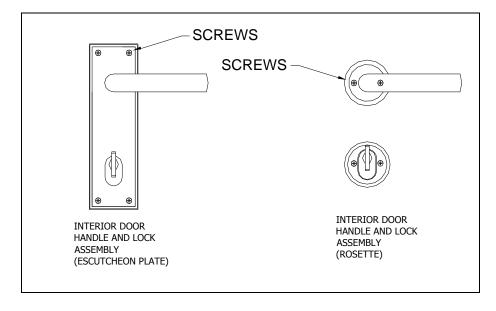


3. REMOVE THUMBTURN AND KEYTURN CYLINDERS

The next step is to remove the Keyturn and the Thumbturn cylinders.


Both the Keyturn and the Thumbturn are attached to the lock case by a single screw fixed through the face plate of the lock case. Remove the screws and the lock assemblies can be pulled out of the lock case.



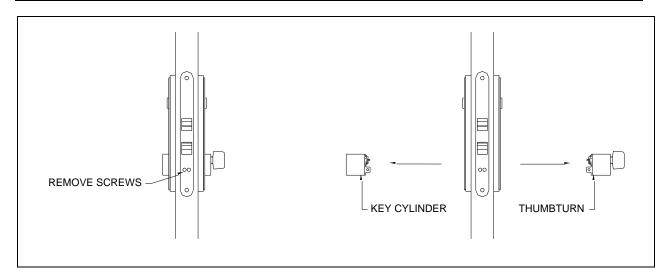

4. REMOVE HANDLES (LEVERS)


Proceed to remove one of the two lever handles. Remove the set screw on one lever handle. With one handle removed the other handle, complete with the shaft assembly, can be slid out of the door from the opposite side.

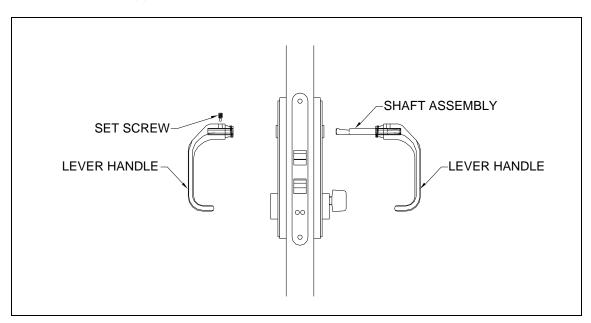

5. LOCKCASE REMOVAL


Now remove the two screws that are attaching the lockcase and slide the entire lock case out of the door.



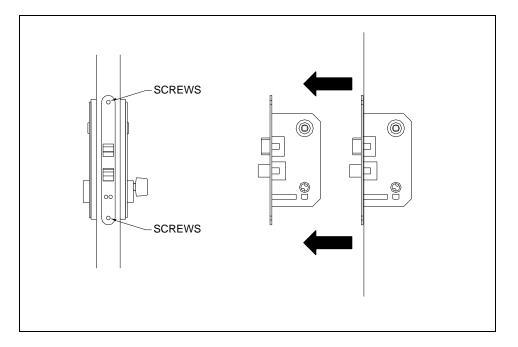

6. OPEN LOCKCASE – INTERNAL LOCKCASE & SPRING EXPOSURE

The lock case is fixed together with four screws. By removing the four screws the top half of the lock case can be lifted free allowing access to the internal components of the lock. Replace the damaged springs as required.

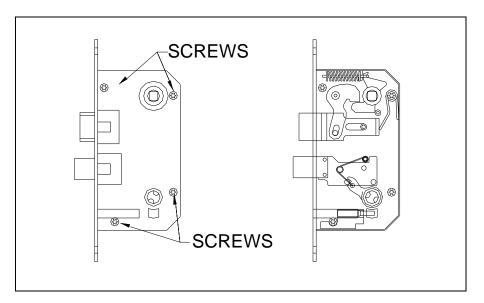

7. RE-ASSEMBLE THE LOCK.

Follow the instructions in reverse to re-assemble, however, replace all relevant parts to ensure a correct functioning TrioVing lockset. See Section 8 for potential maintenance parts.



8. MAINTENANCE AND REPLACEMENT PARTS

Ensure that you review and check your TrioVing lockcase because there are several models in the 53 Series. Model numbers are easily identified by looking at the end of the lockcase when it is installed. There is no need to remove the lockset in order to determine the model number.

Although there are a few maintenance items to consider, it might be better to simply replace the entire lockcase. The AMT Store does not stock maintenance parts for all 53 Series locksets, but the 5312/8 and 5382/8 the most common locksets. See parts list.

Should your TrioVing lockset require some cosmetic improvements, there is a vast range of handles, keepers, strike plates, rosettes, escuthcheon plates and much more online at <u>www.theamtstore.com</u>.



9. PARTS LIST

General Maintenance Items

| Description | Part Number | Notes / Checked |
|--|--------------|-----------------|
| TrioVing 5312/8 | | |
| TrioVing 5312/8, Latch Bolt Spring | HW-LS8900834 | |
| TrioVing 5312/8, Cylinder Hub Spring | HW-LS8900829 | |
| TrioVing 5382/8 | | |
| TrioVing 5382/8, Cylinder Hub Spring | HW-LS8402627 | |
| TrioVing 5382/8, Pin Spring | HW-LS8901029 | |
| TrioVing 5382/8, Spring for Upper Hook | HW-LS8900844 | |
| TrioVing 5382/8, Spring Guide | HW-LS8900822 | |
| TrioVing 5382/8, Latch Hook | HW-LS8900837 | |
| TrioVing 5382/8, Pin for Lower Hook | HW-LS8900840 | |
| TrioVing 5382/8, Hook, Lower Deadbolt | HW-LS8900843 | |
| TrioVing 5382/8, Lower Deadbolt | HW-LS8900842 | |

Lockcases

| Description | Part Number | Notes / Checked |
|---------------------------|----------------|-----------------|
| 5312/8, Lockcase, Left | HW-LS8403700L | |
| 5312/8, Lockcase, Right | HW-LS8403700R | |
| 5316/8, Lockcase, Left | HW-LS5316810 | |
| 5316/8, Lockcase, Right | HW-LS5316800 | |
| 5336/8, Lockcase, Left | Manly_5336/8-L | |
| 5336/8, Lockcase, Right | Manly_5336/8-R | |
| 5341 Deadbolt Lockcase | HW-LS5341840 | |
| 5382/8, Lockcase (Slider) | HW-LS/SLIDE | |

TrioVing Keyed Cylinders, Keyed Alike, 32mm with 3 Keys

| Key Group | Finish | Part Number | Notes / Checked |
|-----------|-----------------|-----------------|-----------------|
| Group 2 | Satin Chrome | HW-LS5520010A2 | |
| Group 3 | Satin Chrome | HW-LS5520010A3 | |
| Group 4 | Satin Chrome | HW-LS5520010A4 | |
| Group 5 | Satin Chrome | HW-LS5520010A5 | |
| Group 6 | Satin Chrome | HW-LS5520010A6 | |
| Group 7 | Satin Chrome | HW-LS5520010A7 | |
| Group 9 | Satin Chrome | HW-LS5520010A9 | |
| Group 10 | Satin Chrome | HW-LS5520010A10 | |
| Group 15 | Satin Chrome | HW-LS5520010A15 | |
| Group 20 | Satin Chrome | HW-LS5520010A20 | |
| 5520 | Satin Chrome | HW-L\$552036 | |
| 5520 | Polished Chrome | HW-LS5520002 | |

TrioVing Thumbturn (Cylinder Thumbs)

| Model | Finish | Part Number | Notes / Checked |
|------------|-----------------|--------------|-----------------|
| 5541, 24mm | Polish Chrome | HW-LS5543001 | |
| 5541, 24mm | Satin Chrome | HW-LS8402463 | |
| 5541, 32mm | Polished Brass | 5543014 | Custom Order |
| 5541, 32mm | Satin Brass | 5543003 | Custom Order |
| 5541, 32mm | Satin Chrome | HW-LS8402464 | |
| 5541, 32mm | Polished Chrome | 5543012 | |